


STEP 1


SLIP BASE SOCKET OVER  
END OF WIRES

STRIP WIRES APPROX. 5/8" FROM  
ENDS - TWIST ENDS TOGETHER

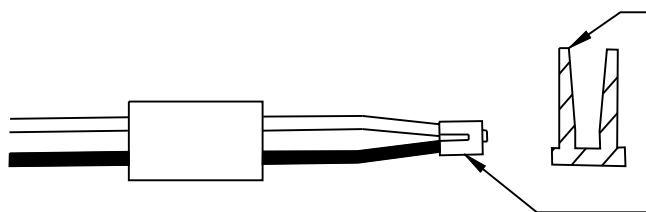

STEP 2


APPLY SEALER TO OUTSIDE OF SEALING  
PLUG - FILL CAVITY WITH SEALER

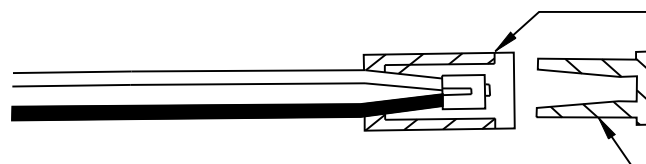

STEP 3

PUT CRIMP SLEEVE OVER WIRE  
ENDS - CRIMP SLEEVE AND CUT  
OFF EXCESS WIRE

PULL BASE SOCKET OVER WIRE  
END AS FAR AS POSSIBLE

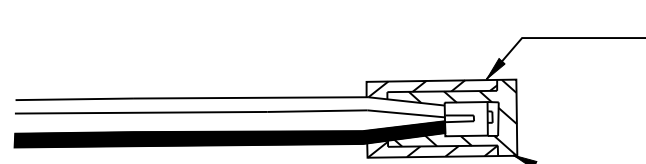

STEP 4

PUSH SEALING PLUG INTO  
BASE SOCKET

PUSH WIRES TO END OF BASE  
SOCKET TO ASSURE COMPLETE  
SEALING OF CONNECTION

DRI-SPLICE TYPE WIRE  
CONNECTOR

NOTES:

1. FOR WIRE SIZES NO. 14, 12  
AND 10, ALL CONNECTIONS  
IN VALVE BOXES ONLY.
2. INSTALL SPEARS DS-100  
DRI-SPLICE CONNECTORS  
WITH DS-300 SEALANT.

DETAIL NO.  
**2655**

**City of Scottsdale  
Standard Details**

APPROVED BY:  
**Scottsdale Standards &  
Specifications Committee**

# TYPICAL IRRIGATION WIRE CONNECTION

DETAIL NO.  
**2655**